 

 
 
 


1. Unlock: Press the button  on the remote transmitter once to unlock while the parking lights gleam twice.
2. Lock: Press the button  on the remote transmitter once to lock while the parking lights gleam once when all power windows are rolling up for 30 seconds.
3. Locating: When locked, press the button  on the remote transmitter once to locate the vehicle while the parking lights gleam three times. For some remote which with 4 button, press the button  1 time; the light flash gleam 3 times to finding car.
4. Trunk Releasing: Press the button  on the remote transmitter once for two seconds to release the trunk while the parking lights gleam three times.
5. Negative / Positive Output Option for Trunk Releasing:  
As shown on the diagram:  
Plug in 1-2 for +12V Output;  
Plug in 2-3 for -12V Output (to GND).
6. Time Option of central Door Locking System:  
As shown on the diagram:  
Plug in 2-3 position is 0.5 Second for electric Central Lock;  
Plug in 1-2 position is 3.5 Seconds for Pneumatic Central Lock.
7. Learning Code:  
Press the Learning Code button once. When the parking lights are ON, it is in the Learning Code mode when you can press any button on the remote transmitter to learn code. When the parking lights are OFF, Learning Code is finished. By this way again and again, you can learn max. 4 remote transmitters' code. If you learn more than 4 remote transmitters' code, the first 4 remote transmitters' code is deleted.

