
## **5007R TURN SIGNAL SWITCH WIRING DIAGRAM** FOR INTERNAL INDICATOR LAMP: Switch housing must be grounded by contact with metal steering column Rear right Front right 5 AMP Fuse To Headlamp 3 Terminal To Headlamp Switch for Flasher Switch for Tail lights Battery Parking lights Brake Light Switch Battery

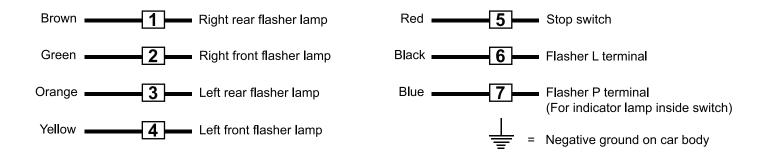

Front left

Rear left