Regulators with Spring Assist Instructions - USE CAUTION

The front regulators are spring loaded. USE CAUTION

- 1. Note the Safety Bolt as labeled on regulators
- 2. DO NOT remove the safety bolt unless the motor is attached.
- 3. Leaving the safety bolt attached: remove the motor, place the regulator in the door, reinstall the motor.
- 4. You may remove the safety bolt after the motor is reinstalled.
- 5. Final step install regulator in the original mounting holes.

