



Suggested Installation Instructions for:
602-668, 1963-1982 Rear Wheel Bearing Greaser

1. Raise rear of car. (Be safe! Use a jackstand.)
2. Remove half shaft. Items 54, 60, & 61.
3. Remove spindle nut, washer & flange. Items 6, 7, 8 & 9.
4. Place greaser over spindle, through deflector and seal. Item 10 & 13. Replace washer and nut 6 & 8. Tighten finger tight.
5. Grease bearing with about four tablespoons (seven to nine shots with a grease gun) of GM 1052497 (a tube for grease guns) or equivalent. Check with a GM Dealer Parts & Service Department about the grease you should use.
6. Remove greaser and replace all items in reverse order.
7. Repeat on opposite side of car.
8. Lower car.

