



CryO2™ Activation Timer Instructions

Part# 080203

This kit includes:

- One CryO2 Activation timer switch
- Four female connectors + one extra
- 10' Red wire
- 10" Black wire

Note: This switch is designed for placement between the activation switch and the solenoid valve!

1. Disconnect battery cables before working with the electrical system of you vehicle.
2. Decide where you would like the switch placed. The firewall is a good choice. Other popular areas are under dash or glove box for easy access.
3. Attach using double sided tape or a mounting screw if accessible.
4. If retro fitting your CryO2 system this will replace the full wide open (FWO) switch.
5. Wire according to diagram below.
6. Reconnect the battery.
7. You can test without wasting gas by leaving the tank valve closed. Turn on activation switch and listen for the clicks of the timer switch and the solenoid.
8. Adjust the timing to meet your time needs. "ON TIME" is the time the solenoid valve will be open and CryO2 system will be charging, "OFF TIME" will be the duration closed.

