




Negative trigger

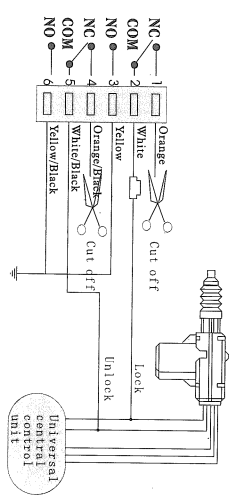


If the car have original lock system, judge the trigger is positive or negative Positive/Negative trigger

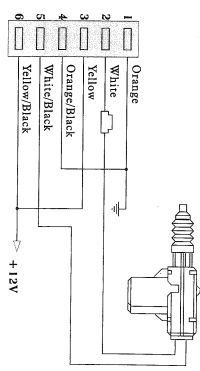

Negative trigger

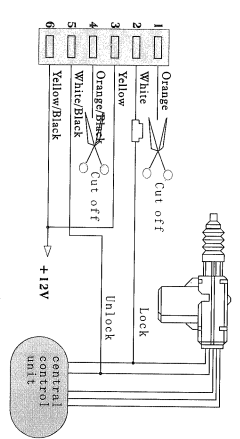

The car has Air compressor lock Please turn the jumper from on to off on the PCB. For example: AUDI, Benz

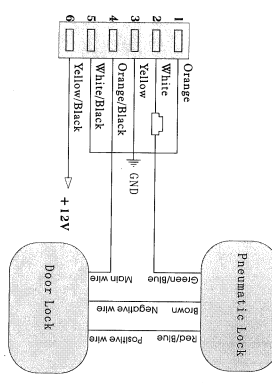

Keyless Entry Instruction User Guide