



JEEP JK 2 1/2" - 4" TRACK BAR KIT

Thank you for choosing Rough Country for your suspension needs.

In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools. If question exist we will be happy to answer any questions concerning the design, function, and correct use of our products by calling 1-800-222-7023.




Parts Included:
 1-Track Bar Body
 1-Heim End
 1-Jam Nut
 2-Heim Spacers

Tools Needed:
 21mm Socket / Wrench



INSTALLATION INSTRUCTIONS

1. Using a 21mm socket, remove bolt securing the front track bar to the frame. Retain stock hardware. **See Photo 1.**
2. Remove the track bar from the axle using a 21mm wrench. Retain the hardware for reuse. **See Photo 2.**

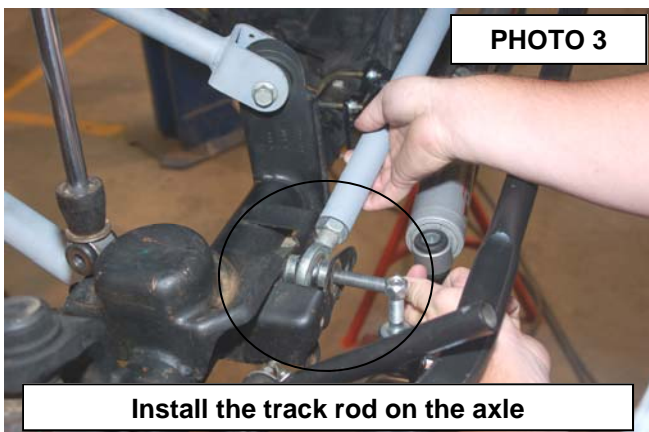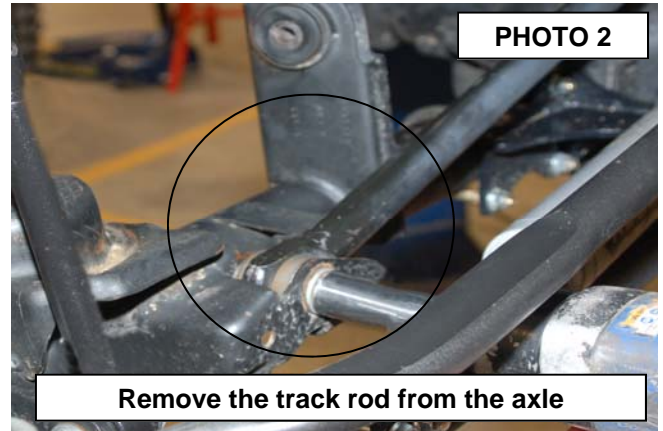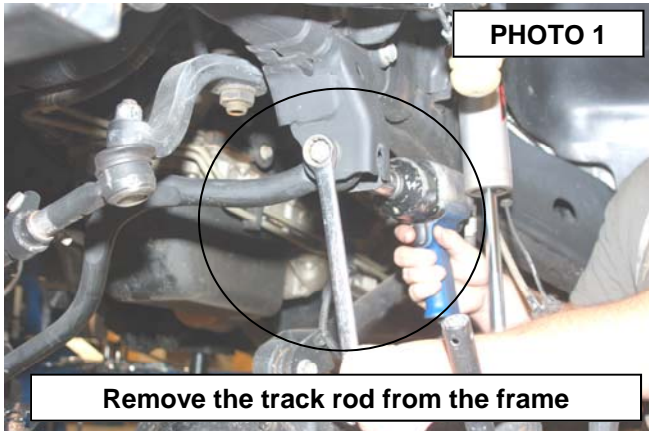

3. Assemble the bushings/sleeves in the track rod and adjust to a length of 32 7/8" center of hole to center of hole. Install the new track bar into stock frame bracket using the stock hardware.
4. Check to make sure the body is centered over the axle and install the lower end of the new track rod on the axle as shown in **Photo 3**. Torque all fasteners to specifications. **It may be necessary to turn the steering wheel to align the track rod end with the axle.**

POST INSTALLATION

All components must be retightened after 500 miles, and every three thousand miles after installation.

Thank you for using Rough Country Suspension for your off road needs!!