




INSTALLATION INSTRUCTIONS

VACUUM RESERVE SYSTEM

Part #SUM-G1460/1461

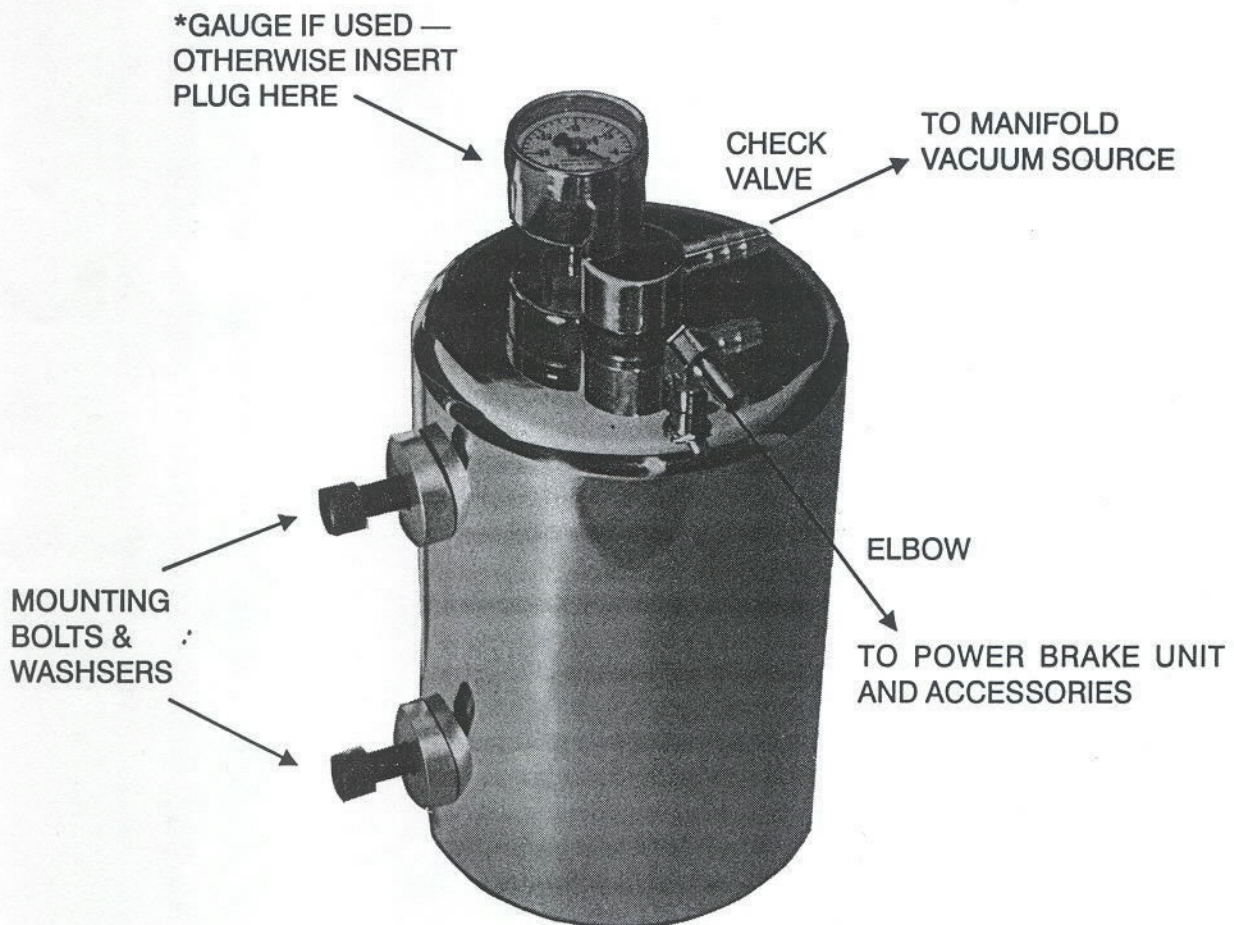

Notes:

1. Use teflon tape on all pipe threads.
2. Use power brake vacuum hose only.
3. Verify that brake vacuum assist system works as intended by car manufacturer before moving vehicle.
4. Be sure to install elbow before check valve.

* GAUGE SOLD SEPARATELY UNDER PART NUMBER SUM-G3124 OR SUM-G3125