


TONNO PRO

WWW.TONNOPRO.COM

Installation Instructions



STEP 1

The cover has retaining straps with quick-release buckles to keep it from being damaged when bulk hauling or when it is not on the vehicle.

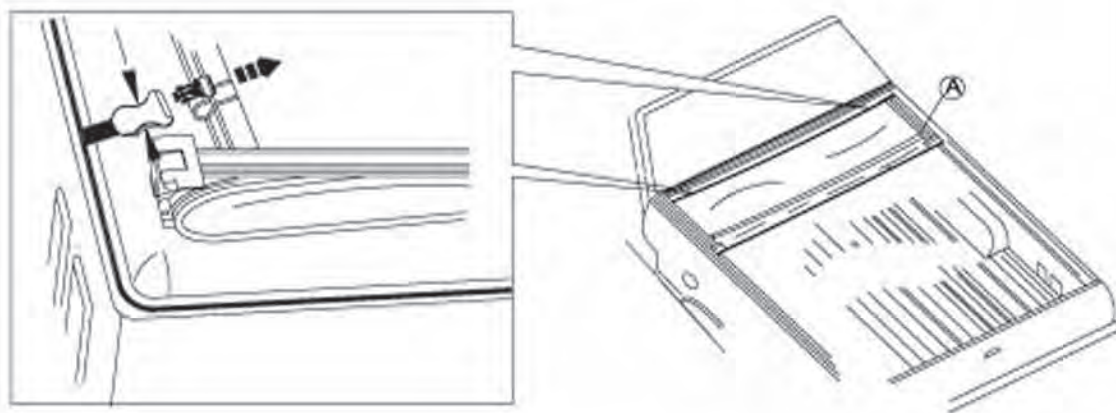

STEP 2

Secure both front clamps.

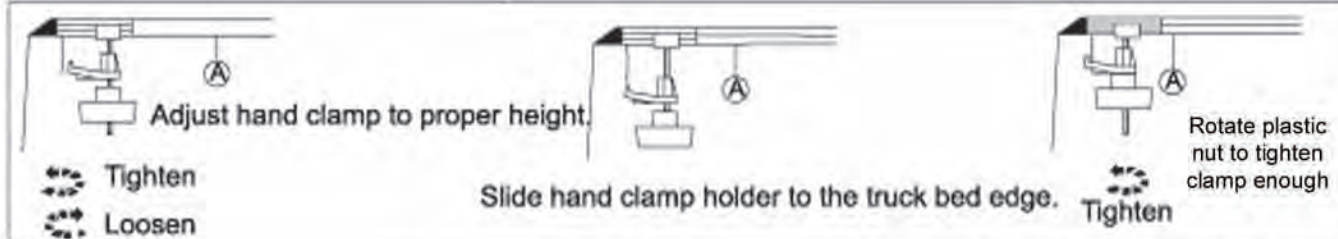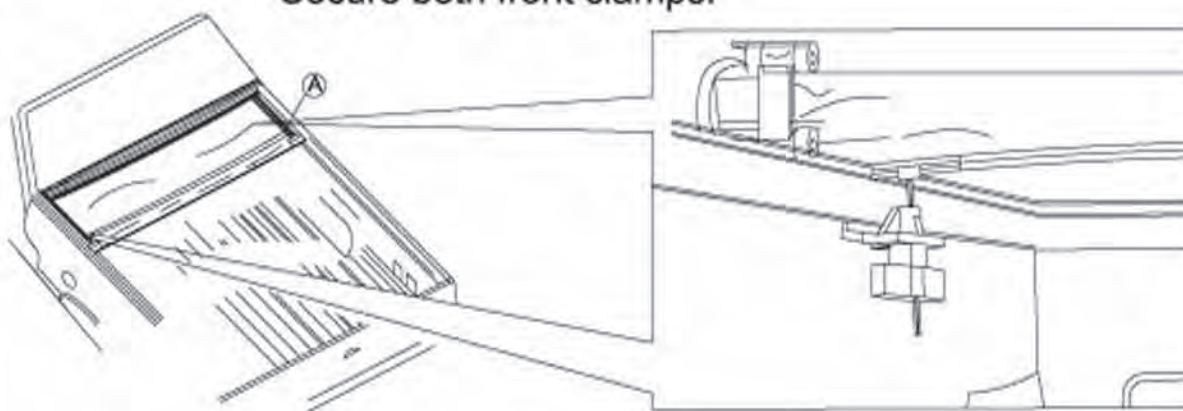

(Do not over tighten the clamp!)