



## JEEP TJ FRONT SWAY BAR CLAMPS

Thank you for choosing Rough Country for your suspension needs.

Please read all the instructions before beginning the installation. Check the kit hardware against the kit contents. Be sure you have all the needed parts and understand where they go. Also please review the tools needed list and make sure you have needed tools. If you have any questions please call us at 800-222-7023.

**KIT CONTENTS:**  
2-Clamps

**TOOLS NEEDED:**  
3/16" Allen Wrench



### INSTALLATION INSTRUCTIONS

1. Make sure the sway bar is centered from side to side on the frame mounts.
2. Install the Clamps as shown in **Photo 1** and tighten using a 3/16" allen wrench. Driver side shown.
3. Clamps shown installed in **Photo 2** and sway bar centered.

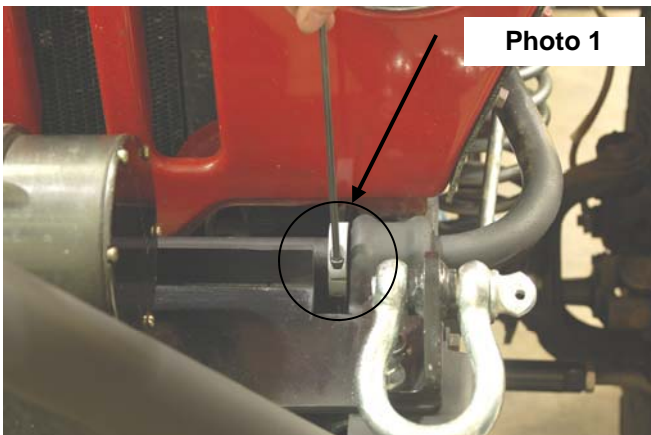


Photo 1

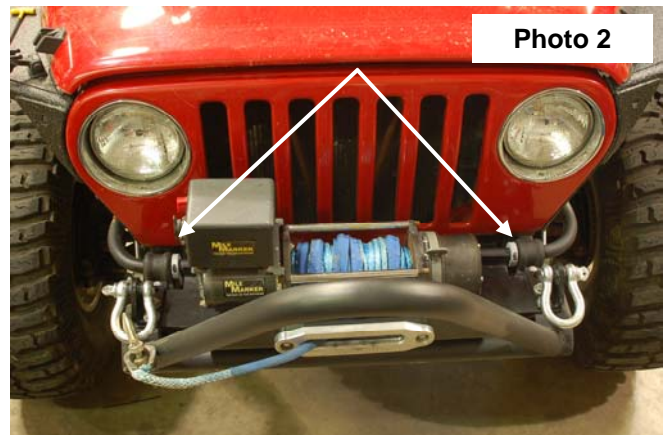


Photo 2

### POST INSTALLATION

- All components must be retightened after 500 miles, and every three thousand miles after installation.

Thank You for using Rough Country for your off road vehicle needs