

Refer to the assembly drawing for installation procedure


- 1. Install the Mounting Stud through the inside of the Valve Cover. The recommended sized hole for the Mounting Stud is 1-1/8" to 1-1/4".
- 2. On the outside, install the Gasket, Washer and one of the Locknuts. Tighten the Locknut to compress the Gasket so that it conforms to the Valve Cover. (Do not over-tighten)
- 3. Install the second Locknut and then the Breather. Thread each piece down until they contact the first Locknut. Point the breather tube in the desired direction and tighten the second Locknut against the bottom of the breather.




P/N 68785

Refer to the assembly drawing for installation procedure

- 1. Install the Mounting Stud through the inside of the Valve Cover. The recommended sized hole for the Mounting Stud is 1-1/8" to 1-1/4".
- 2. On the outside, install the Gasket, Washer and one of the Locknuts. Tighten the Locknut to compress the Gasket so that it conforms to the Valve Cover. (Do not over-tighten)
- Install the second Locknut and then the Breather. Thread each piece down until they contact the first Locknut. Point the breather tube in the desired direction and tighten the second Locknut against the bottom of the breather.

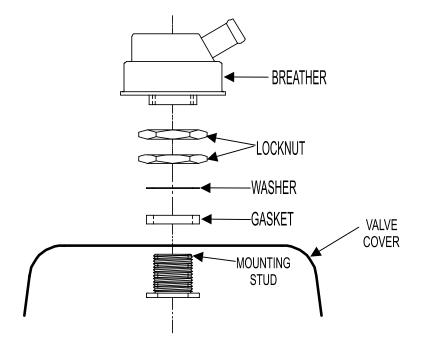

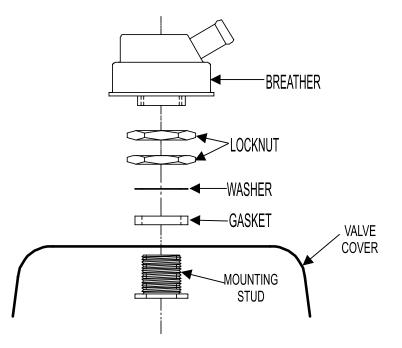

For Technical Assistance, call Moroso's Tech Line at (203) 458-0542, 8:30am-5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC

80 Carter Drive • Guilford, CT 06437 Phone: (203) 453-6571 • Fax: (203) 453-6906 For Technical Assistance, call Moroso's Tech Line at (203) 458-0542, 8:30am-5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC 80 Carter Drive • P.O. Box 1470 • Guilford, CT 06437

Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

68785INST

Rev. A 060900

68785INST

Rev. A 060900