

QUALITY... PLAIN & SIMPLE

TH-400 Electric Kickdown Kit Instructions Part# KD-2400HT

#### General Installation Notes:

Please read instructions completely before beginning installation. If you have any questions please don't hesitate to call.

**WARNING:** Do not attempt to install kickdown kit while engine is running. Be sure engine, body and frame are grounded properly.

NOTE: Disconnect battery before beginning installation.

#### TH-400 Electric Kickdown Kit Installation

- Step 1: Remove back cover of the aluminum switch box and remove slide trigger and inner cable.
- Step 2: Mount aluminum switch box to bottom of transmission as shown in Fig. 1. Route outer housing up to carburetor, using Lokar's Carburetor and Return Springs, Kit No. SRK-4000. Mount kickdown bracket as shown in Fig. 3 and cut housing to desired length.
- Step 3: Reinstall inner cable and slide trigger now.
- Step 4: Install wires to switch. Use 5 amp (minimum) key on hot wire to one side of switch. Connect second side of switch to the vertical terminal on trans as shown in Fig. 2. NOTE: Transmissions may have either one or two terminals.

## TH-400 Electric Kickdown Kit Instructions

Part# KD-2400HT

### Building American Quality... With A Lifetime Warranty!

10924 Murdock Dr. • Knoxville, TN 37932 • (865) 966-2269 • FAX (865) 671-1999 • tech@lokar.com • www.lokar.com


Step 5: Install carb hex fitting to carb as shown in Fig.3.

Step 6: Slide kickdown end stop onto inner cable.

Step 7: Open carburetor to "wide open" position and pull inner wire TIGHT and slide kickdown end stop back against carb hex fitting. Tighten setscrew.

Step 8: Leave 1" of inner cable past cable stop. Make fine adjustments with carb adjuster.

Step 9: When satisfied with kickdown, cut off excess cable that is past cable stop.

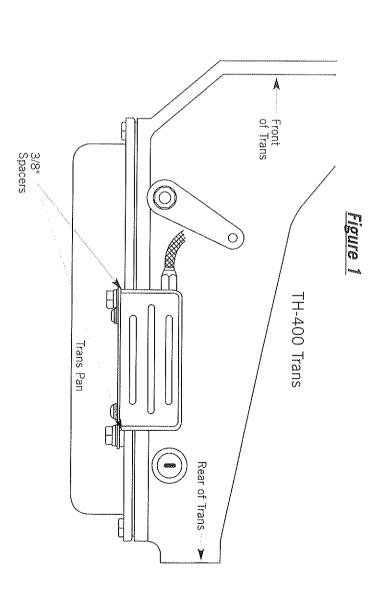

### CONTRICTION OF STATE OF STATE

QUALITY... PLAIN & SIMPLE"

TH-400 Electric Kickdown Kit Instructions Part# KD-2400HT

# TH-400 Electric Kickdown Kit Instructions

Building American Quality... With A Lifetime Warranty!

10924 Murdock Dr. • Knoxville, TN 37932 • (865) 966-2269 • FAX (865) 671-1999 • tech@lokar.com • www.lokar.com

